

Use a pair of 30mm wrench to tighten the axle nut. One wheel-axle is assembled. And repeat the procedures on the other side wheel-axle assembling. It should be easily to put together

Step 2. Install Shaft and Swingletree braces and Swingletree onto the frame.

After install both wheel-axle assemblies, you can turn the cart to right position Use some strong box(s) or blocks to support the base of front cart shown in Fig 4 below. Find shaft braces marked as Part # 3 in Ass.1 of the fist page

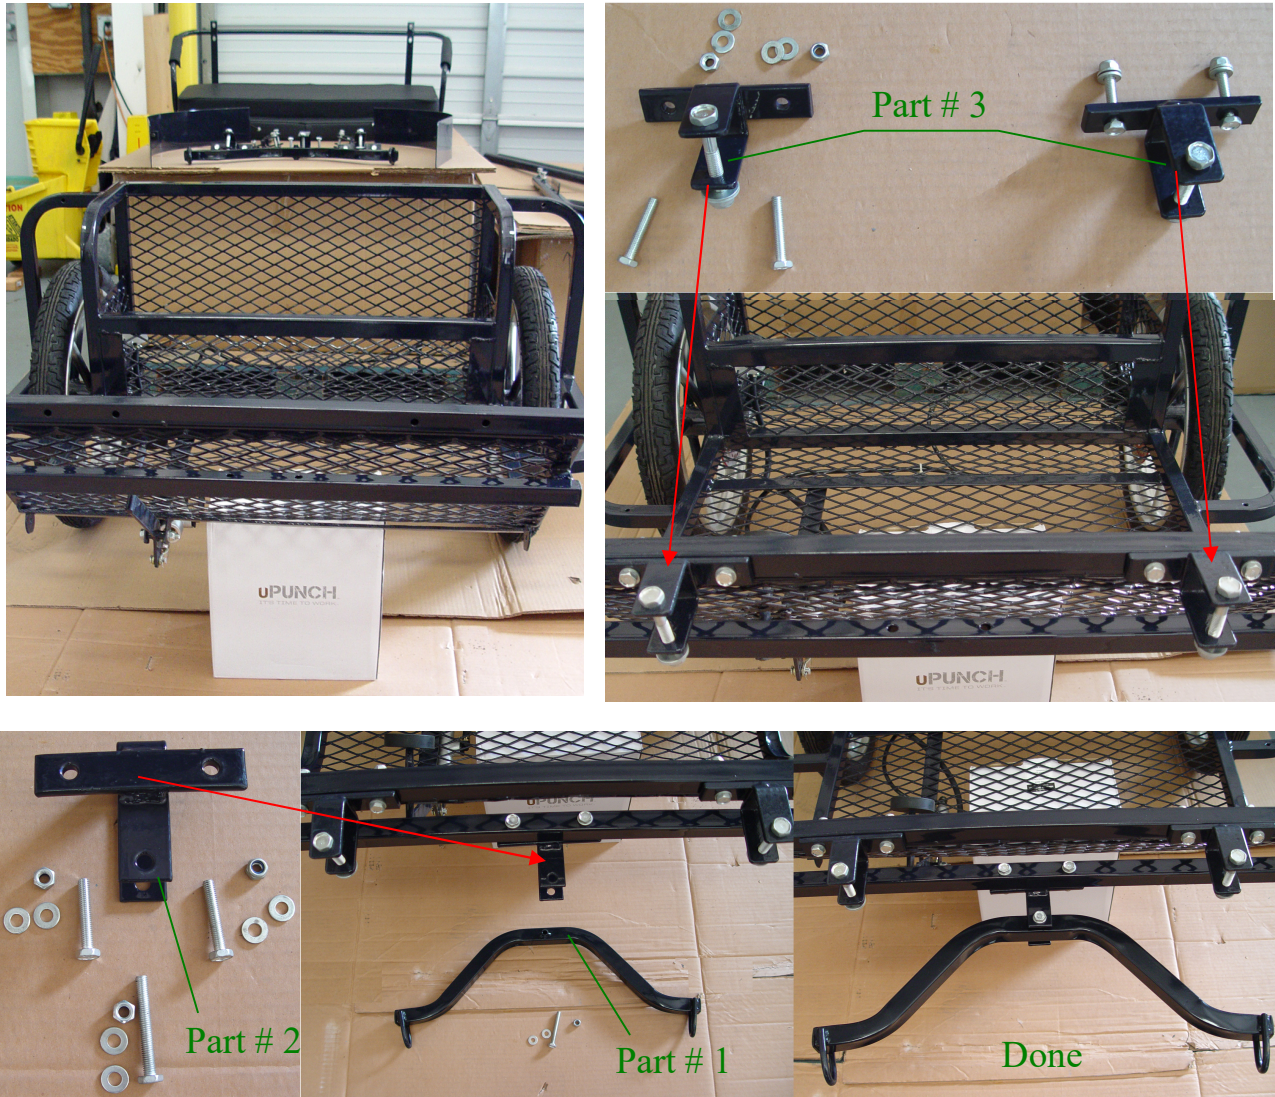


Fig. 4